Electrolux

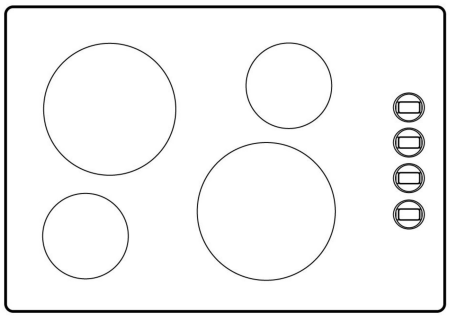

24" Electric Cooktop

Electric Cooktop

Version: 10/25

Product Specifications

Cooktop

Cooking Surface Type	Smooth
Hot-Surface Indicator Light	Yes

Display

Control Location	Right
Display Type	Mechanical

Electrical Specifications

Connected Load @ 120V	6.4 kW
Minimum Circuit Required	30 Amps
Voltage Rating	240 V

Safety Certifications and Approvals

CSA Listed	Yes

Cooktop Performance

Right Front Element Burner Size	6"
Right Rear Element Burner Size	7"
Left Front Element Burner Size (Small)	5"
Left Front Element Burner Size (Large)	8"
Left Rear Element Burner Size	6"
Right Front Element Burner	1200 Watts
Right Rear Element Burner	1800 Watts
Left Front Element Burner (Small)	750 Watts
Left Front Element Burner (Large)	2200 Watts
Left Rear Element Burner	1200 Watts

Dimensions and Volume

Height	2 13/16"
Width	24"
Depth	21 9/16"
Cutout Height	5"
Minimum Cutout Width	23"
Minimum Cutout Depth	20 1/4"
Maximum Cutout Width	23 1/4"
Maximum Cutout Depth	20 1/2"

General Specifications

Prop 65 Label	Yes
Warranty - Labor	1 Year
Warranty - Parts	1 Year

Right to Repair Details

Right to Repair	Available - Visit electrolux.ca/en/Owner-Support/right-to-repair for more information

We reserve the right to change specifications or discontinue models without notice.
Electrolux Major Appliances, N.A.
CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • electrolux.ca

Installation Diagram

Cooktop Dimensions

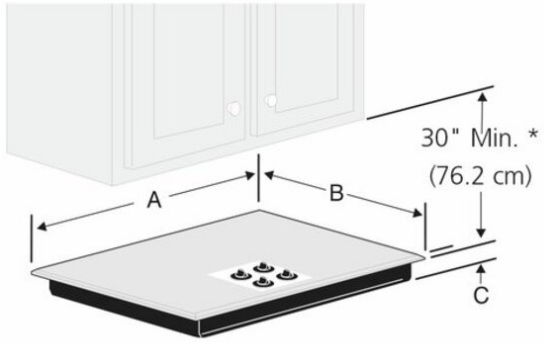

IMPORTANT INSTALLATION-INFORMATION

- All electric cooktops run off a single phase, three-wire or four-wire cable, 240/208 volt, 60 hertz, AC only electrical supply with ground.
- Please note minimum distances between cooktop and adjacent and overhead cabinetry is 30" (76.2cm).

Cooktop Cutout Dimensions

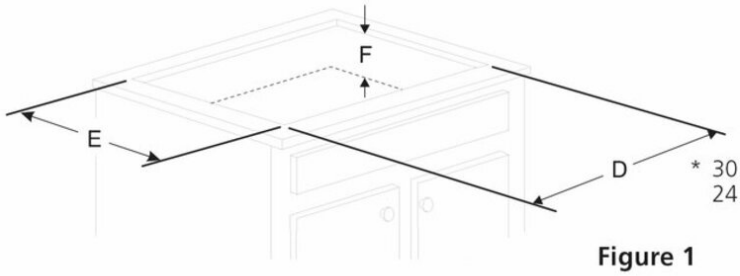

* 30" (76.2 cm) min. for unprotected cabinet
24" (61 cm) min. for protected surface

Figure 1

MODEL	A. LENGTH	B. WIDTH	C. DEPTH	CUTOUT DIMENSIONS				F. DEPTH BELOW COOKTOP*
				D. LENGTH		E. WIDTH		
				MIN.	MAX.	MIN.	MAX.	
24" Ceramic Glass	24 (61.0)	21 3/8 (54.4)	2 5/8 (6.7)	23 (58.5)	23 1/4 (59.0)	20 1/4 (51.4)	20 1/2 (52.1)	5 (12.7)
26" Coil Elements	25 3/4 (65.4)	21 9/16 (54.8)	3 1/2 (8.9)	25 (63.5)	25 (63.5)	20 1/2 (52.1)	20 1/2 (52.1)	5 1/2 (14)
30" Ceramic Glass	30 3/8 (77.8)	21 3/8 (54.4)	2 5/8 (6.7)	29 5/8 (75.2)	29 7/8 (75.9)	20 1/4 (51.4)	20 1/2 (52.1)	5 (12.7)
30" Coil Elements	30 (76.2)	21 1/2 (54.6)	3 (7.6)	26 3/4 (67.9)	28 1/4 (71.8)	19 1/8 (48.6)	20 (50.8)	5 (12.7)
32" Ceramic Glass	32 1/4 (81.9)	20 1/4 (51.4)	3 3/4 (9.5)	31 (78.7)	31 1/4 (79.4)	19 (48.3)	19 1/4 (48.9)	5 3/4 (14.6)
32" Coil Elements	32 1/4 (81.9)	20 1/4 (51.4)	3 3/4 (9.5)	31 (78.7)	31 1/4 (79.4)	19 (48.3)	19 1/4 (48.9)	5 3/4 (14.6)
36" Ceramic Glass	36 3/4 (93.5)	21 3/8 (54.4)	2 5/8 (6.7)	35 5/8 (90.5)	36 1/8 (91.8)	20 1/4 (51.4)	20 1/2 (52.1)	5 (12.7)
36" Coil Elements (36" X 18")	36 (91.4)	18 (45.7)	3 7/8 (9.8)	34 1/4 (87)	34 3/8 (87.3)	16 5/8 (42.2)	16 3/4 (42.5)	5 7/8 (14.9)
36" Coil Elements (36" x 21 1/2")	36 (91.4)	21 1/2 (54.6)	3 (7.6)	32 3/4 (83.2)	34 1/4 (87)	19 (48.3)	20 (50.8)	5 (12.7)

All dimensions are in inches (cm).
Only some models are available in Canada.
* Allow 2" (5 cm) space below cooktop to clear the electric cable and allow for installation of the junction box on the wall at the back of the cooktop.

We reserve the right to change specifications or discontinue models without notice.
Electrolux Major Appliances, N.A.
CANADA • 5855 Terry Fox Way • Mississauga, ON L5V 3E4 • 1-800-265-8352 • electrolux.ca